



1. Seal drain holes in planter if necessary.
2. Install water evacuation tube, if necessary, on top of a layer of gravel at base of planter (not included in kit).

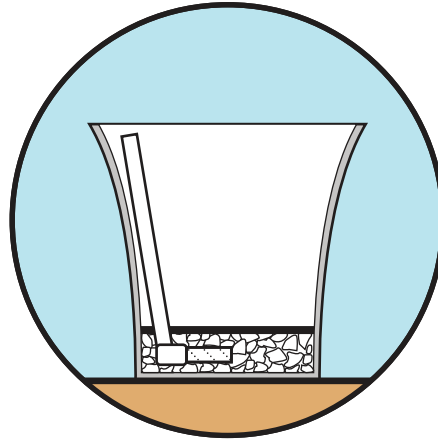


3. Place 2-4" of gravel evenly on top of evacuation tube.
4. Place Geo Textile on top of gravel to prevent soil from draining out of planter.

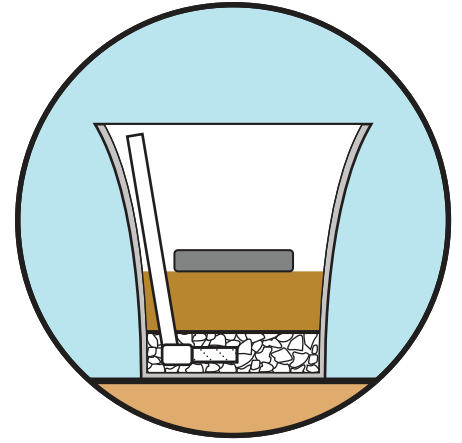


5. Add a base layer of soil.
6. Place Reservoir tank on top of base layer of soil in a level position.



7. Insert the PVC fill tube onto Reservoir. Trim secured fill tube to desired height.

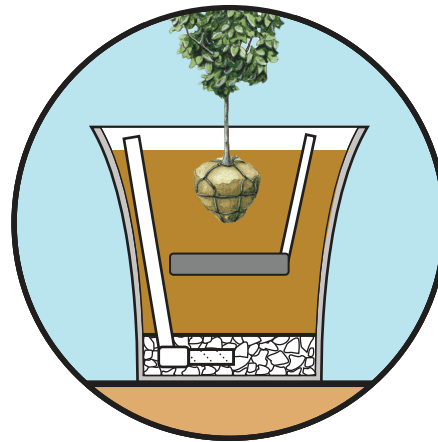

8. Place layer of soil on Reservoir and tamp soil into the holes.
9. Install the plant material keeping the root-ball within 12" of Reservoir.

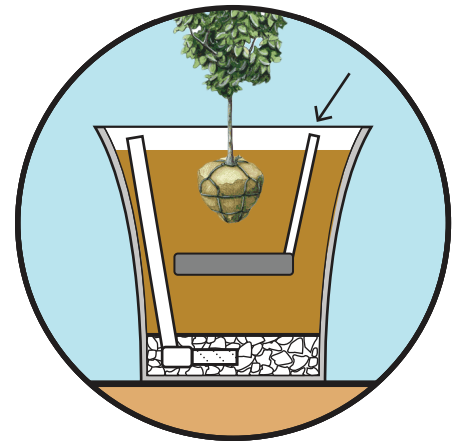

10. For the first time only, water thoroughly on top. Add water to Reservoir through the fill tube until Reservoir is full leaving no water visible in tube.
11. Monitor water level (every week for first month and every 2-3 weeks thereafter)